



don't wake the neighbours...

You've seen our Silent Disco tent at JerseyLive or Grassroots...now have one at your own event. Gallery's silent disco is a unique addition to any party. A silent disco is 'a disco party without traditional speaker system, instead relying on the use of wireless headphones and an FM transmitter to deliver the music to participants. Those without the headphones hear no music'.
Perfect for parties in venues where you can't make noise or just as a spectacle!

How it works...

Each pair of Gallery Silent Disco headphones have two channels, so the wearer can choose between two kinds of music. Try pitching Drum&Bass against Disco and watch the crowd dance and sing in different ways... you plug your two audio sources (Decks, CDJs, iPods, mixers) into the transmitter's two inputs and away you go, **stereo in stereo!**

What you get:

Headsets (Up to 400 pairs)

Two channel Gallery Silent Disco Headsets.

Batteries

Each headset takes 2 AAA batteries, supplied charged ready for your event.

Transmitter

Ready to receive your two audio sources

Spare Transmitter

Just in case

headphone jack > transmitter cables

For use with devices with headphone jacks

red/white to transmitter cables

For use with mixers / professional equipment

Pricing

no of headsets



A typical rental of 150 headsets is therefore £400 (100x£3 + 50x£2).

Make a booking

reserve your date by calling Gallery on **811100**
or email silentdisco@gallerymagazine.co.uk

Terms

1 Charges are for a 24 hour period unless otherwise confirmed in writing.

2 Costs of rental include all items above.

3. Minimum rental is 50 headsets

3. Headsets to be collected from Gallery office.

4 If delivery is required we will use a delivery service and add this cost to your invoice.

5 A £12 replacement cost applies to lost or broken headphones

6 3 pairs of additional headphones will be supplied to account for breakages

7 A £36 security charge will be applied as insurance over breakages.